
KETTLER

Wall Mounted Parasol

PF25

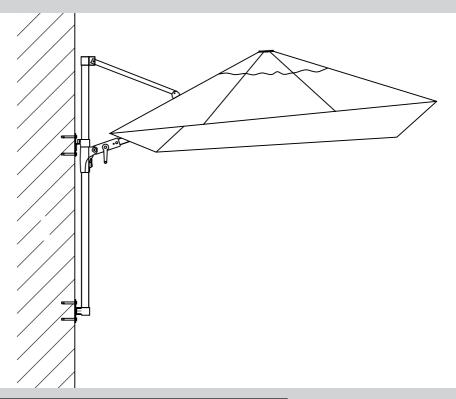

IMPORTANT

PLEASE KEEP THIS BOOKLET FOR FUTURE REFERENCE.
THIS IS IMPORTANT INFORMATION REGARDING THE
USE AND CARE OF YOUR GARDEN FURNITURE.







PERSONS REQUIRED

Parts List

Part	Description		Qty
А	Frame		1
В	Protective Cover - with 3 part supporting rod		1
С	Wall Bracket 1		1
D	Wall Bracket 2		1
Е	Bolt M6x55		1
F	Bolt M6x35		1
G	Nut		2
Н	Alen Key		1
I	Spanner	5	1
J	Card Drilling Template	→ → DRILLING TEMPLATE → → 렇	1



Wall fixings are not included. Please visit your local DIY centre/hardware store to purchase appropriate fixings for the type of wall you wish to attach the parasol to.

Helpful advice before you begin:

- We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
- Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
- 3. Assemble this product on a soft surface.
- 4. To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.


- 5. Keep fittings out of children's reach.
- 6. Do not use any other tools other than those recommended to build this product.
- In the unlikely event that this product has missing or damaged parts, please visit our website www.kettler.co.uk




Do not discard any of the packaging until you have checked that you have all the parts and the pack of fixings.


Assembly - Wall Fixing


Using the fold-out template provided, (part K) mark and then drill the holes in the wall. Use a spirit level to ensure the template is vertical before drilling.

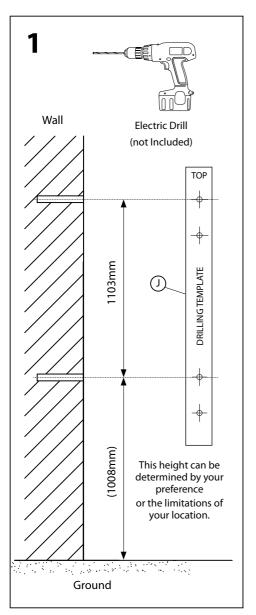


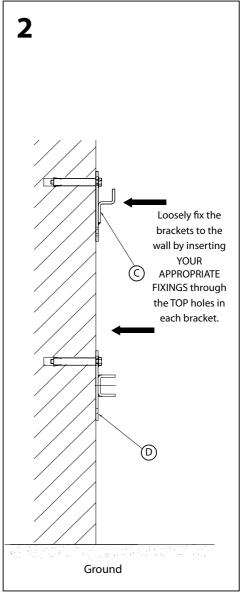


Assembly - Wall Fixing

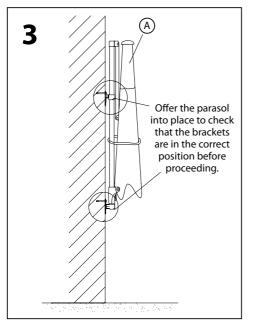


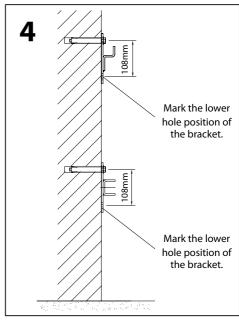

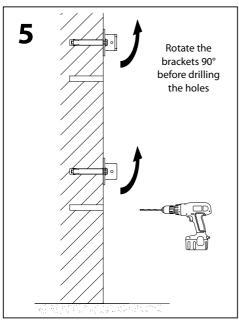


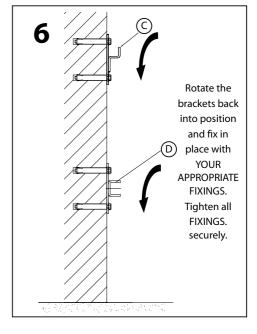



Assembly

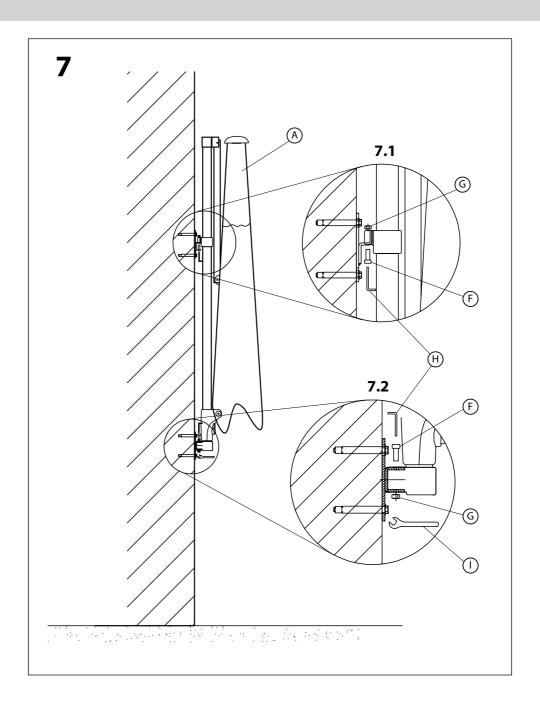


Assembly

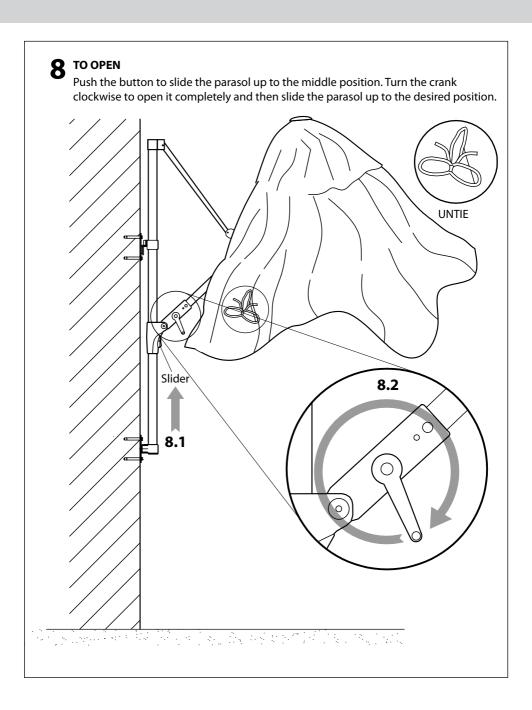


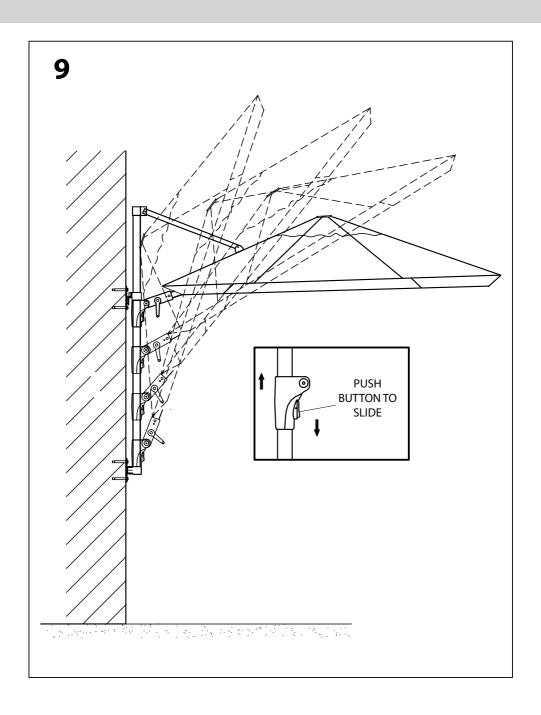

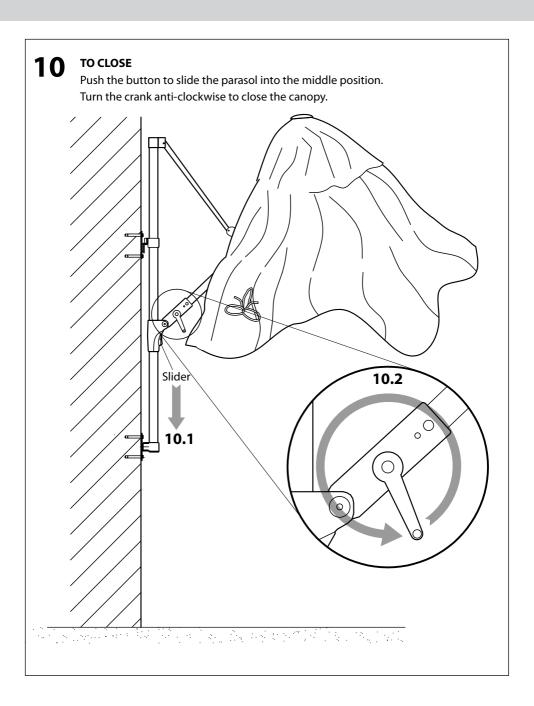


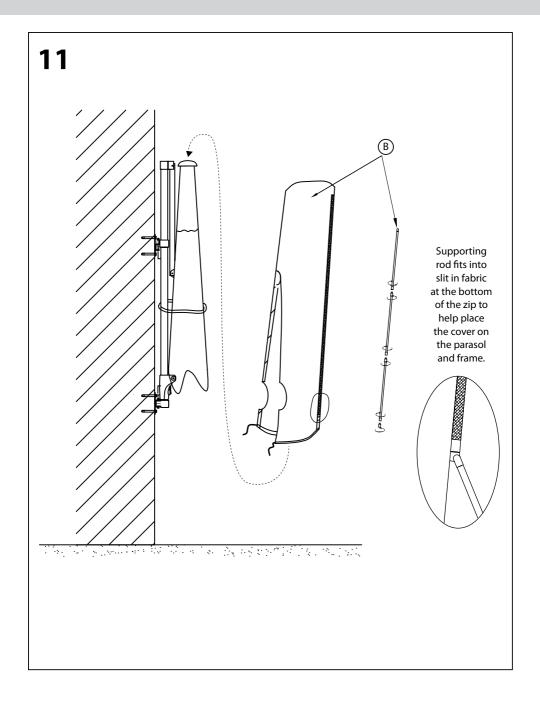


12

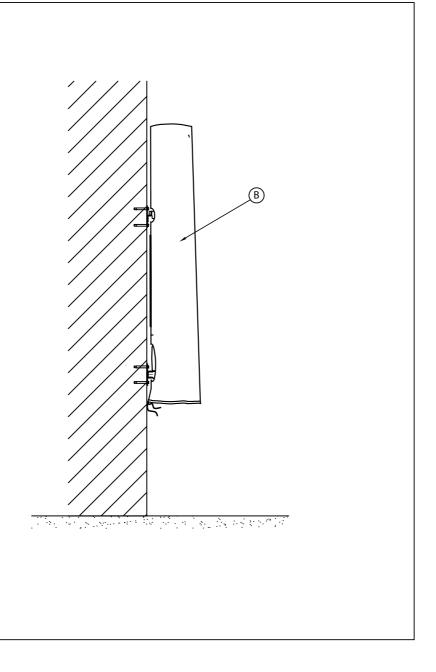

Information

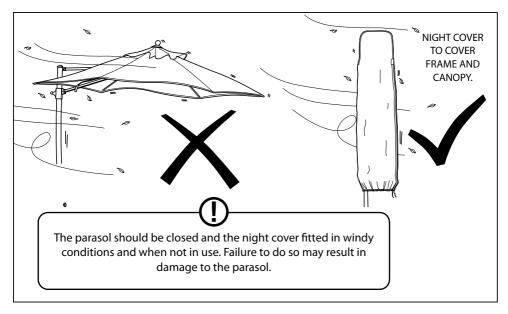

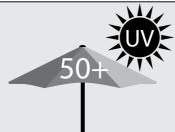

This parasol has UV50+ protection. What does that mean?

For example, a fabric with a UPF rating of 50 only allows 1/50th of the sun's UV radiation to pass through it. This means that this fabric will reduce your skin's UV radiation exposure by 50 times (98% UV block).

Hand wash canopy

The canopy can be carefully removed and washed via hand only. We advise putting back onto the frame to dry naturally.

For Your Safety

- This product may only be used for its intended purpose as furniture for residential properties.
- · Check all components regularly for correct function, damage and loose connections especially at the start of the season and at 1-2 month intervals dependent on use.
- · Damaged components may endanger your safety or shorten the life of the product. Replace all damaged parts immediately. Use only spare parts manufactured by Kettler. Should you wish to purchase spare parts, they can be ordered directly from: www.kettler.co.uk/shop
- Kettler will not be responsible for damaged caused by improper use.



Attention

- Whilst assembling this product keep out of the reach of children. (Choking hazard contains small parts)
- Ensure that your working area is free of possible sources of danger, for example don't leave any tools lying around.
- Always dispose of packaging material in such a way that it may not cause any danger. There is always a risk of suffocation if children play with plastic bags!
- We reserve the right to make changes for technical reasons.





Warranty For Home Use

KETTLER parasols are covered by a 12 MONTH WARRANTY.

The warranty applies to domestic use only. The warranty does not cover accidental damage (including wind damage) or mis-use. To validate your warranty, register at www.kettler.co.uk and quote the product

code from the front of this booklet.